


LIMIT SWITCH ADJUSTMENT

Due to the adjustments of the spring tension to your needs or the use of a battery with a different state of charge, you may be forced to adjust the limit switch setting, which corresponds into the stopping the throwing arm in the right place. For the mentioned reasons such adjustment may be necessary even when the thrower is started for the first time, despite our best efforts to adjust it properly.

To adjust the limit switch properly, loosen two nuts and move the limit switch so that the throwing arm stops at the place shown in the drawing. Remember that moving the limit switch to the left will stop the throwing arm earlier, and moving the limit switch to the right will stop the throwing arm later.

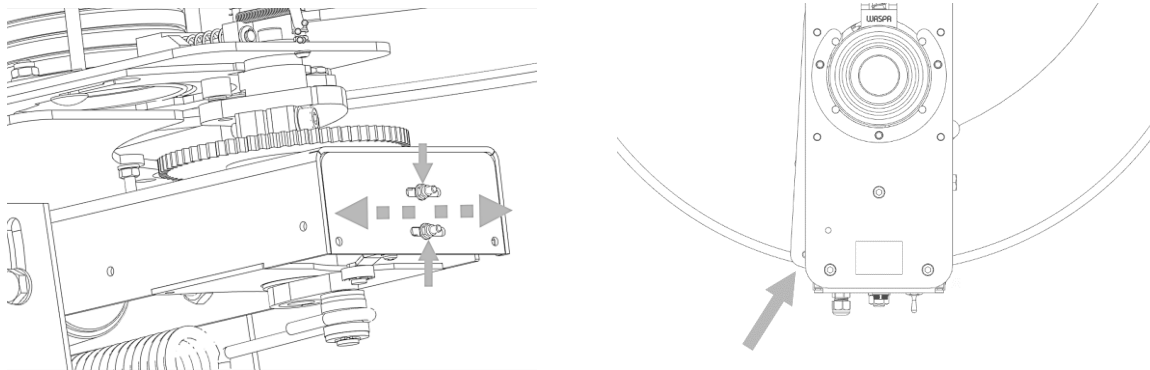

IMPORTANT: Moving the limit switch too far left may prevent the clay from falling onto the sliding plate in time and causing it to break. Moving the limit switch too far right may cause the throwing arm to not stop and the motor to run continuously.